


ASSEMBLY INSTRUCTION 27-XX

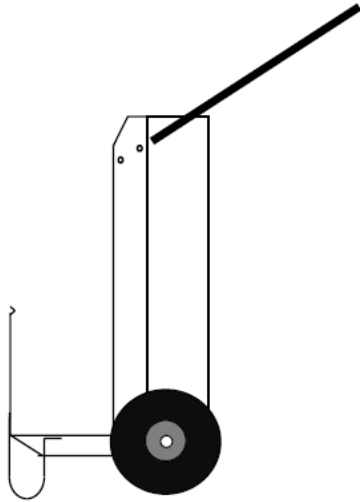

Needed parts:


- Type 27 Handle – 1 pcs.
- Holder for Hose and Cable – 2 pcs.
- M6x16mm HEX Bolt 8.8 ISO4017 Zink Plated – 4 pcs.
- M6 Lock washer DIN127B Zink Plated – 4 pcs.
- M6 Flat washer DIN125A Zink Plated – 4 pcs.
- M6 Nut DIN934 Zink Plated – 4 pcs.

Steps:

1. Put the handle through holes in the device chassis:



2. Use M6 screws, and washers like shown below and fix the holder and handle together:

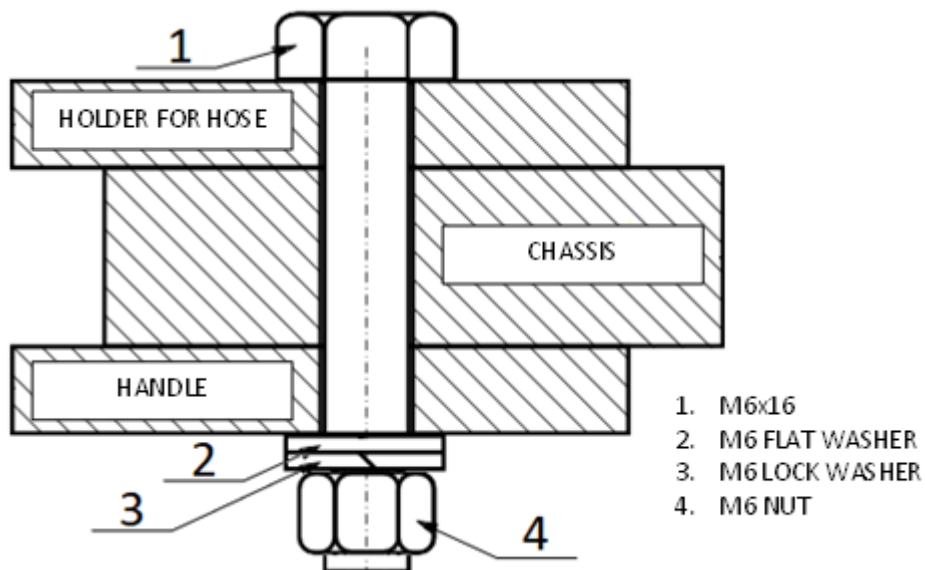



3. Repeat point 2. on the other side of the device.
4. Device is ready:

